
Furniture Manufacture

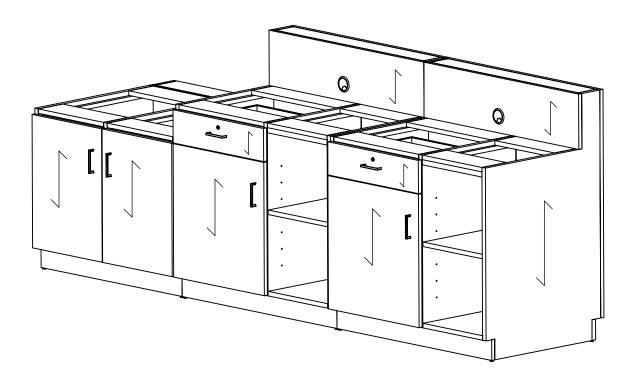

Overall: 115"W x 34 1/4"D x 45 1/4"H

MATERIALS: - HP-Laminate PB-3/4

- 2mm Edge Tape On Shelf

- Plywood 1/2" Drawer Box

- 16" HD-Full Extension Drawer Guide

- Metro 96mm CC Matte Black Pull 4111-1055-P

COMMENTS:

- Overall: 115"W x 34 1/4"D x 45 1/4"H

- Color: Wilsonart - 000 - Custom Laminate


- Color - Powder Coated Paint

Note: Dimensional Tolerance +/- 1/16"

TITLE: AHL 8170XXYY LD115R - 8170M6 - 115 ADA Lobby Desk Right REVISION DATE: 00

NOTE: DESIGN AND DRAWINGS ARE PROPERTY OF DICKSON FURNITURE MANUFACTURERS LLC AND MAY NOT BE DUPLICATED OR REPRODUCED WITHOUT THE EXPRESS WRITTEN CONSENT OF DICKSON FURNITURE MANUFACTURERS LLC REV Α

SCALE: 1:10 SHEET 1 OF 4

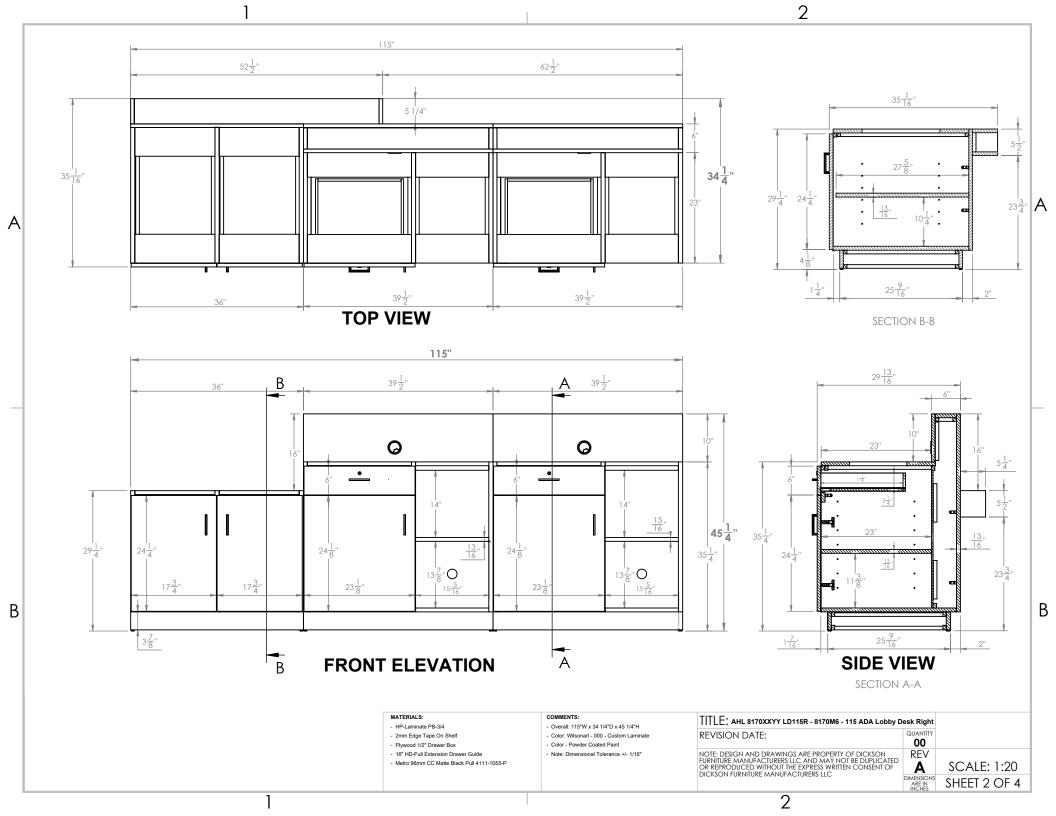

*RECOMMENDATIONS:


- Read instructions before assembling
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE

PARTS:

*PERSONAL PROTECTION **EQUIPMENT (PPE)**

- Hand Protection
- Eye Protection
- Waist Support belt



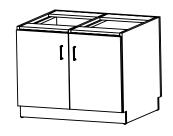





Extension ADA

Pedestal ADA

Left Pedestal

*Tools:









Water level

Measuring Tape Pencil

Drill

*Hardware:




STEP #1

ASSEMBLY INSTRUCTIONS


Note: Assembly can be done with 2 people.

- AHL 8170XXYY LD115R - 8170M6 - 115" ADA Lobby Desk Right -


1

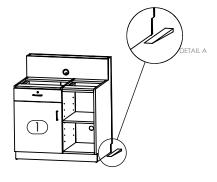


Level the Right Pedestal(1) with shims. Verify by using Water Level. (Reference Detail A).

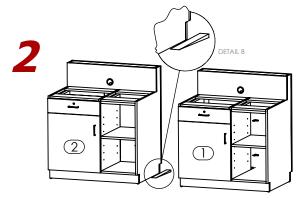


Level the Left Pedestal(2) with shims. Verify by using Water Level.(Reference Detail B).

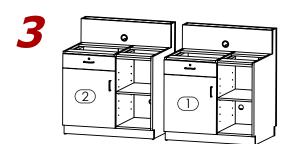


Align pedestals(1)(2) flush from the Back.

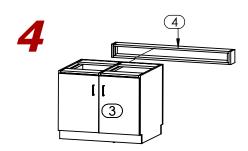


Align and attach the Extension (4) to the Top and Side Left End to the back of the Pedestal ADA (3).

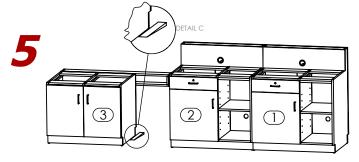

Level the Pedestal ADA(3) with the shims. Verify by using Water Level. (Reference Detail C).

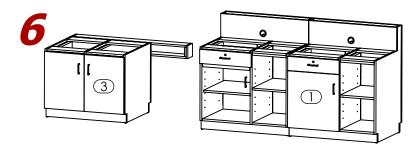

Align the Pedestal ADA(3) with Pedestals(1)(2) flush from the Back.

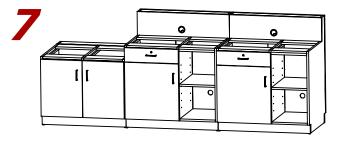

ADA Lobby Desk Right completely assembled.