


- AHB 8240XX 4ABB - 8240CRS - ADA Full Bed Base -




+RECOMMENDATIONS:

- Read instructions before installing
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE

+PERSONAL PROTECTION **EQUIPMENT (PPE)**

- Hand Protection
- Eye Protection
- Waist Support Belt

Parts:

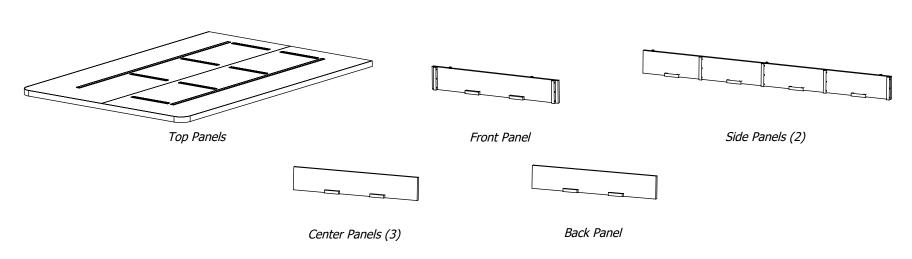

+Tools:







Measuring Tape

Pencil

Electric srewdriver

+Hardware:




Screw

STEP #1


ASSEMBLY INSTRUCTIONS - AHB 8240XX 4ABB - 8240CRS - ADA Full Bed Base -

Note: For best results, bed should be built starting with the top side face down.




Place Top Panels (1) (2) upside down on Floor.




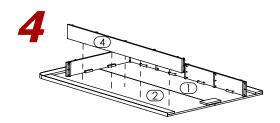


Place Side Panel Left 4 on Top Panel 1 2.

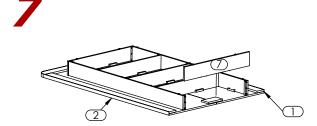


Align Flush the Back Face of Back Panel 7 and Top *Panels* (1) (2).

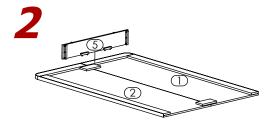


Place Front Panel 5 on Top Panels 1 2.

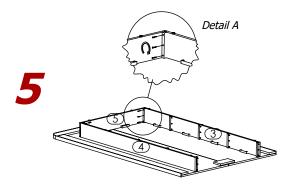


Align and attach Front Panel 5 to Side Panel Right 3 then Panel Left (4). (Reference Detail A).

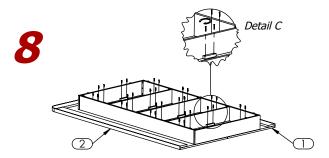

Align assembled Bed Base to taped guides on Top Panel (1) and attach them. (Reference Detail C).

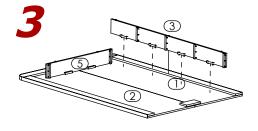

Place Side Panel Right 5 on Top Panels 1 2.

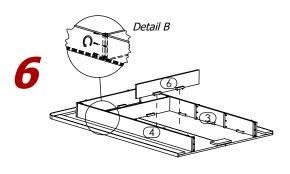


Insert Center Panels 6, align & attach to Side Panels (3) (4). (Reference Detail B).



ASSEMBLY INSTRUCTIONS

- AHB 8240XX 4ABB - 8240CRS - ADA Full Bed Base

Note: To flip this bed, please use at least 2 people.

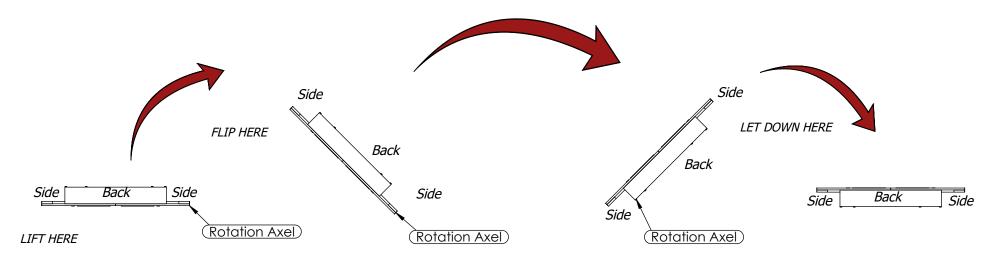



Flip Upright

