


- AHB 8240XX 4ABB - 8240CRS - ADA Full Bed Base -




#### **+RECOMMENDATIONS:**

- Read instructions before installing
- Keep area clean
- Do not drag the parts
- Do not forget to wear PPE

### +PERSONAL PROTECTION **EQUIPMENT (PPE)**

- Hand Protection
- Eye Protection
- Waist Support Belt

#### Parts:

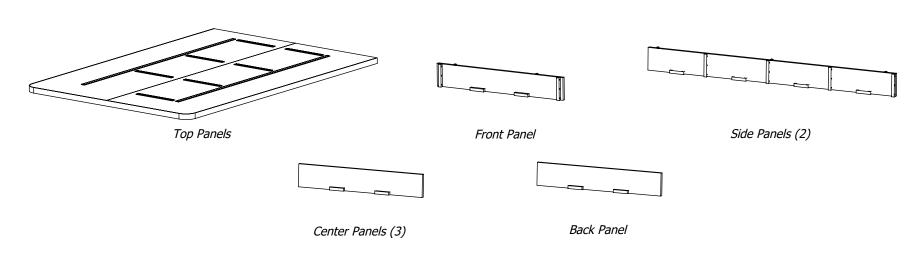

+Tools:







Measuring Tape

Pencil

Electric srewdriver

+Hardware:




Screw


## STEP #1

# ASSEMBLY INSTRUCTIONS - AHB 8240XX 4ABB - 8240CRS - ADA Full Bed Base -


Note: For best results, bed should be built starting with the top side face down.




Top Panels (1) (2) upside down on Floor.

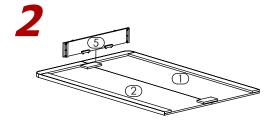


Place Front Panel (5) on Top Panels (1) (2).

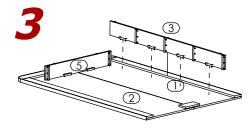


Place Side Panel Right (3) on Top Panels (1) (2).

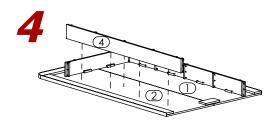


Place Side Panel Left (4) on Top Panel (1) (2).

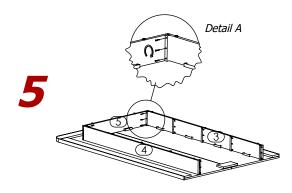


Align and attach Front Panel (5) to Side Panel Right (3) then Panel Left (4). (Reference Detail A).

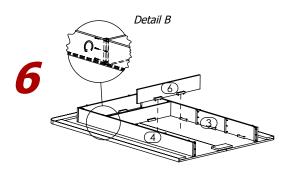

Insert Center Panels (6), align & attach to Side Panels (3)(4). (Reference Detail B).

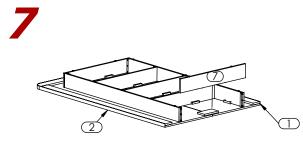

Align Flush the Back Face of Back Panel (7) and Top Panels (1) (2).

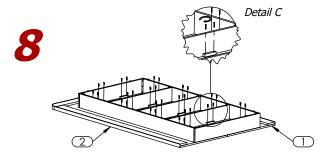


Align assembled Bed Base to taped guides on Top Panel (1) and attach them. (Reference Detail C).



## **ASSEMBLY INSTRUCTIONS**

Note: To flip this bed, please use at least 2 people.

- AHB 8240XX 4ABB - 8240CRS - ADA Full Bed Base

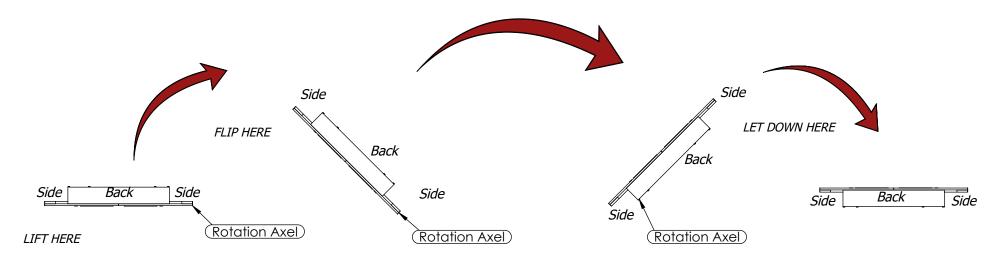



## Flip Upright

